Installation Manual

Thank you for purchase of a Fendarc product! We are confident that you will appreciate the fine quality and craftsmanship of your selection. Fendarc Stands proudly behind each and every product we manufacture.
For more details please refer to our website at
America: www.AeroArmored.com
International: www.yiting.com.tw
We appreciate your business and look forward to your business in the future.
Please read all instructions before installing!!!

This instruction applies to: **Chevy Silverado 2007~ON**
Installation Time: **30 minutes**
Skill Level: **Easy**
Tools: **Allen Head Wrench, Pincer Pliers (or Joint Pliers)**

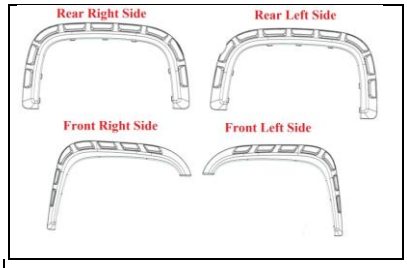	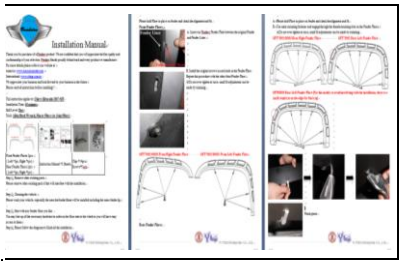	
Front Fender Flares 2pcs (Left *1pc, Right *1pc) Rear Fender Flares 2pcs (Left *1pc, Right *1pc)	Instruction Manual *2 Sheets	Clips *14pcs Screws*8 pcs

Step 1.: Remove other existing parts.
Please remove other existing parts if that will interfere with the installation.

Step 2.: Cleaning the vehicle.
Please wash your vehicle, especially the area the fender flares will be installed including the inner fender lip.

Step 3.: Start with any fender flare you like.
You may line up all the necessary hardware in order on the floor next to the wheel so you will have easy access to them
Step 4.: Please follow the diagrams to finish all the installation.

YI TING Enterprise Co., Ltd.

Please hold Flare in place on fender and check the alignment and fit.

Front Fender Flares:

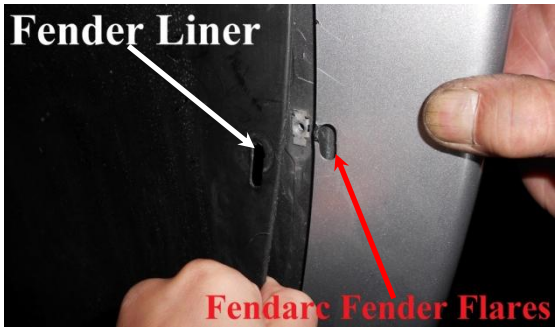

A. Insert our Fendarc Fender Flare between the original Fender and Fender Liner.

B. Install the original screws in each hole in the Fender Flare. Repeat this procedure with the other front Fender Flare.
※Do not over tighten at once, small fit adjustments can be made by trimming.

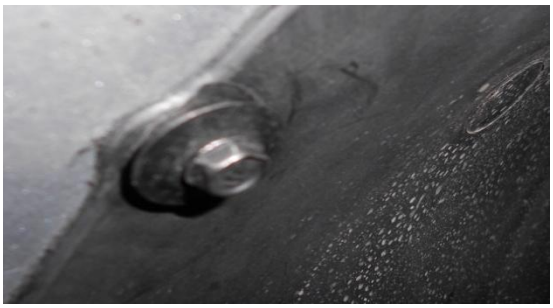

GFT70002/60003 Front Right Fender Flare

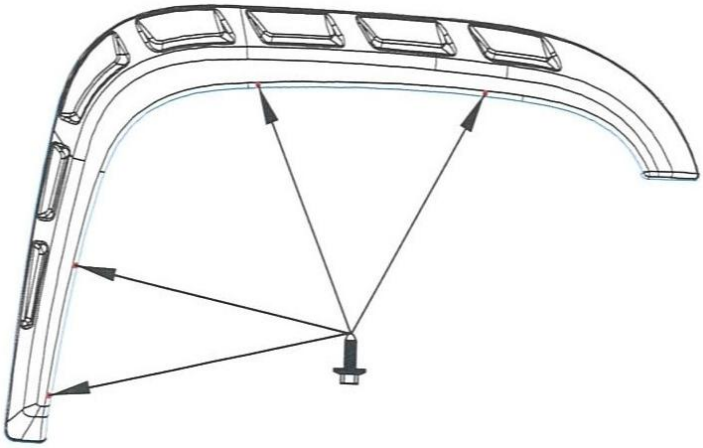

GFT70002/60003 Front Left Fender Flare

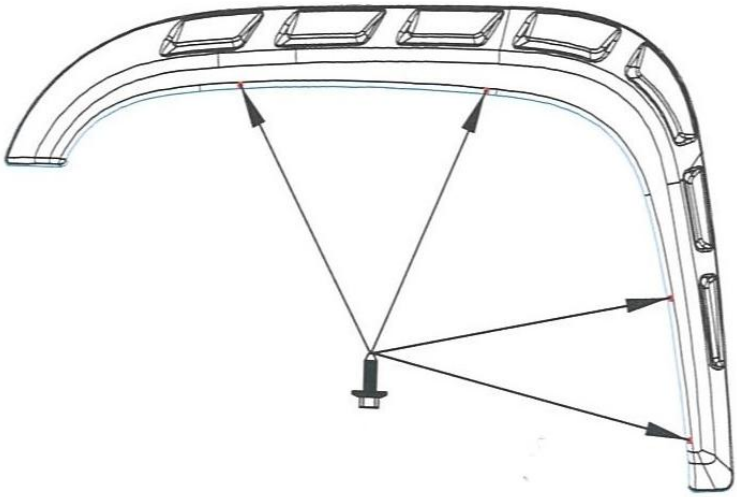

Rear Fender Flares:

A. Please hold Flare in place on fender and check the alignment and fit.

B. Use male mounting fastener and engage through the female mounting slots on the Fender Flares.

※Do not over tighten at once, small fit adjustments can be made by trimming.

GFT70002/60003 Rear Right Fender Flare

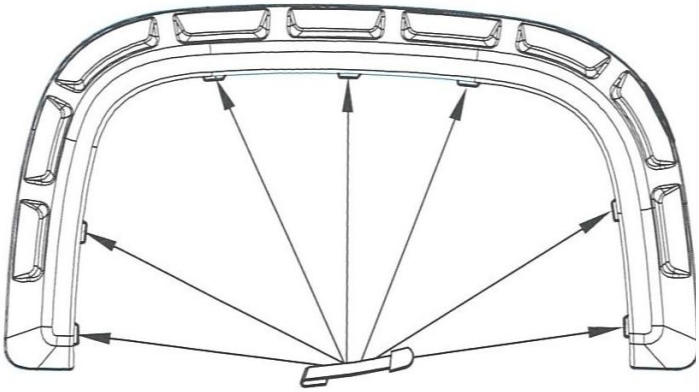

GFT70002 Rear Left Fender Flare

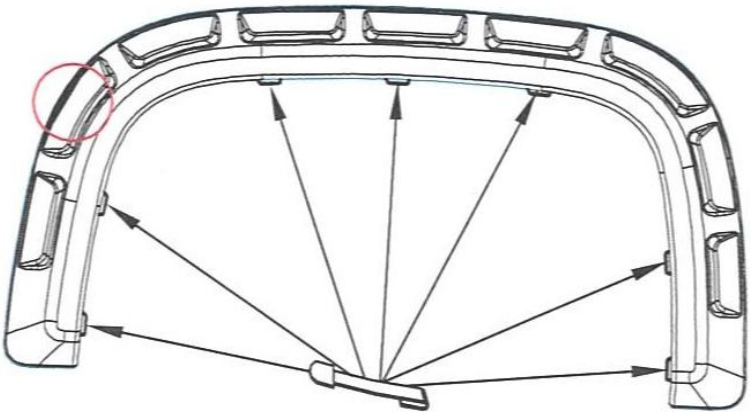

GFT60003 Rear Left Fender Flare (For this model, to avoid interfering with the installation, there is a small round cut on the edge for fuel cap)

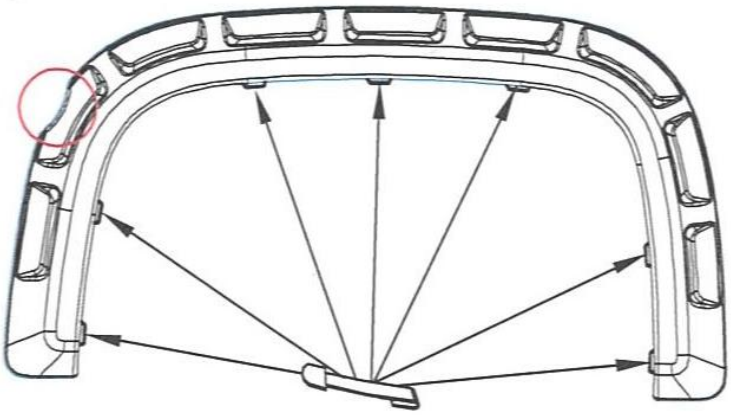

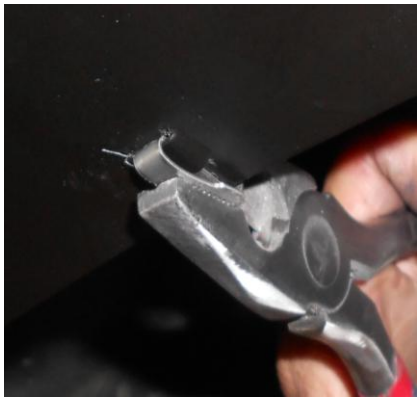

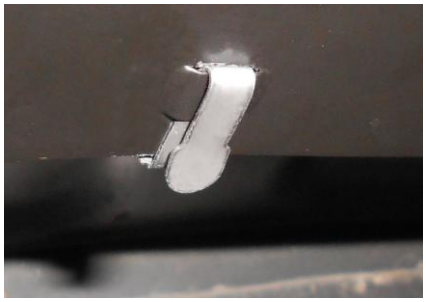

Finish photo

YI TING Enterprise Co., Ltd.